


CONTRACTOR DRONE

Preparation: We recommend using sharp clippers to remove parts from the frame. Pulling parts from the sprue without clipping may result in damage to delicate parts. Use a hobby knife, seam scraper or file to remove any mould lines or frame joint nubs left by the clippers.

Assembly: For best results, use plastic glue (polystyrene cement).

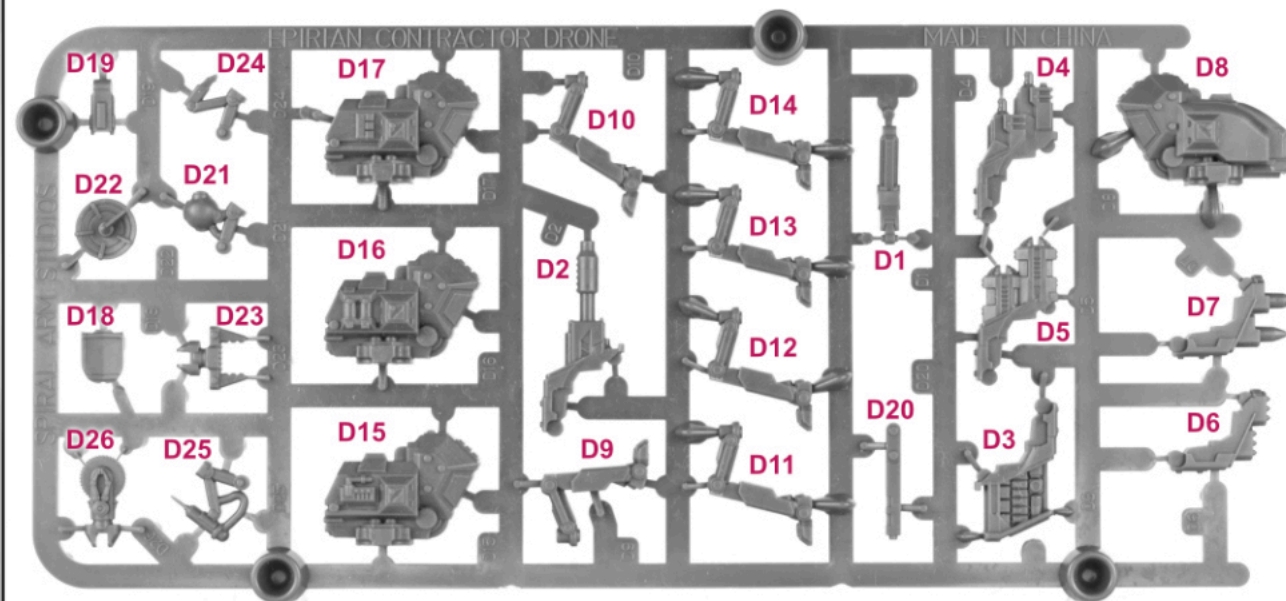


PARTS LIST

D1	Upper Arm Segment	D14	Leg
D2	Maglock Chaingun	D15	Chassis Left - Recon/Tech
D3	Resupply Package	D16	Chassis Left - Medic
D4	Suppressor Machine Guns	D17	Chassis Left Side
D5	Flakk Guns	D18	Chassis Rear
D6	Cluster Missiles	D19	Lower Arm Segment
D7	Strike Missiles	D20	Recon Antenna
D8	Chassis Right Side	D21	Recon Sensor Cluster
D9	Leg	D22	Recon Comms Dish
D10	Leg	D23	Tech Claw
D11	Leg	D24	Tech Cutter
D12	Leg	D25	Medic Syringe
D13	Leg	D26	Medic Multi-Tool
Base	MEBS06 - 46mm Round Base		




RESUPPLY DRONE



01

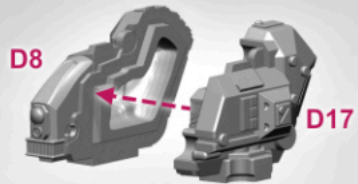

04

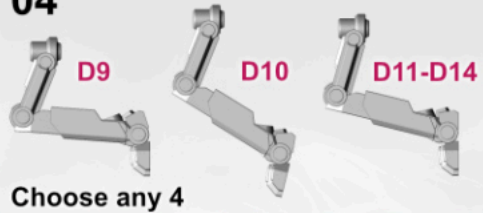


02

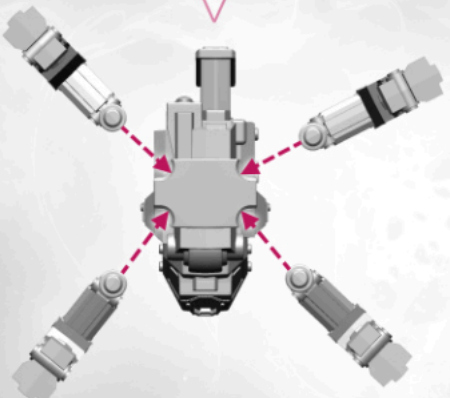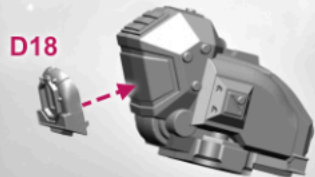

03




05

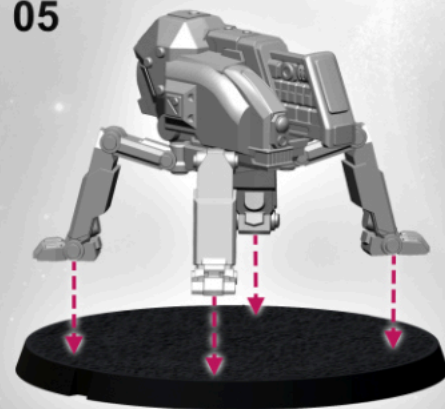


GUN DRONE



01

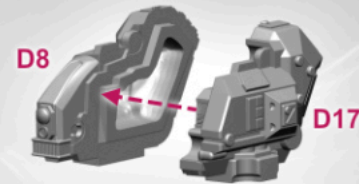

04

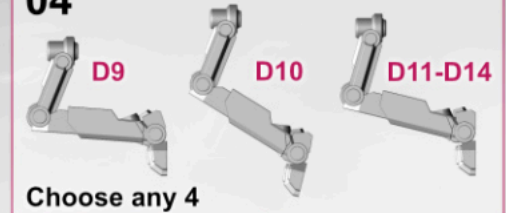


02


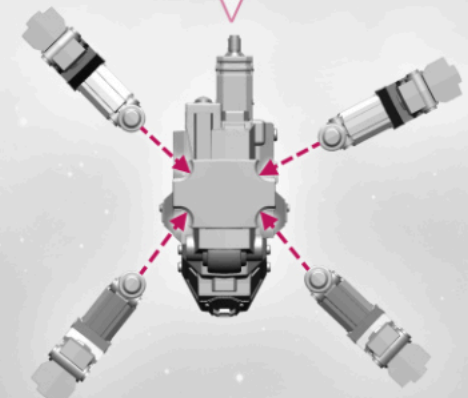
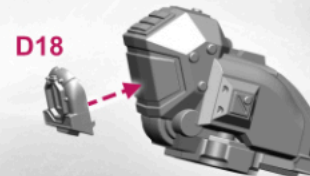


03

Choose 1

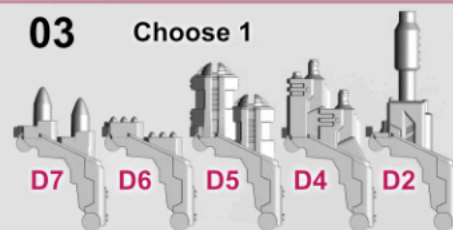


05

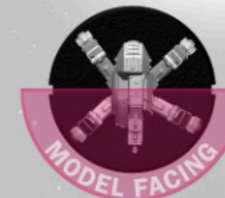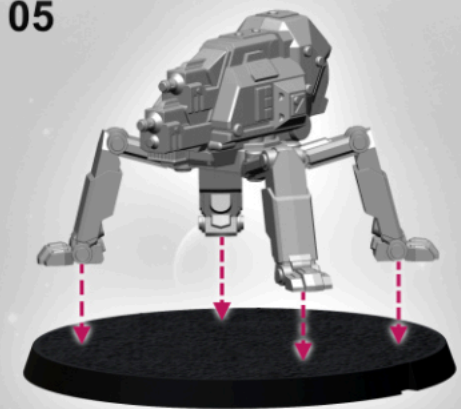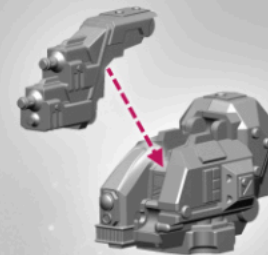

RECON DRONE


01

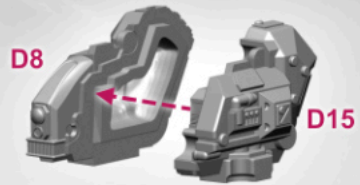


04



07

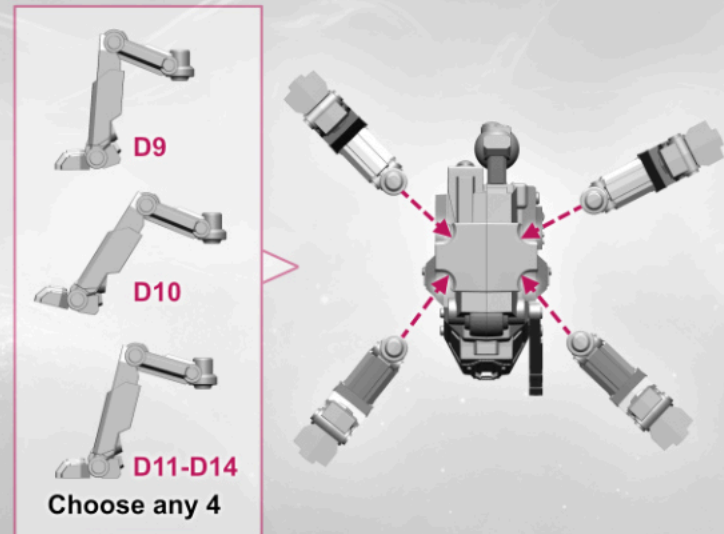


02

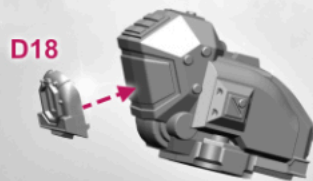


05





03

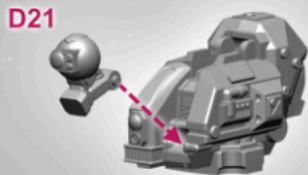

06

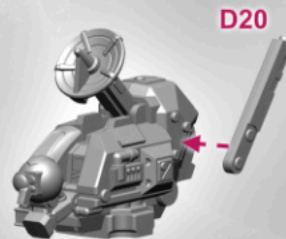


08

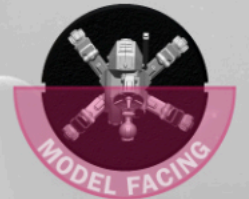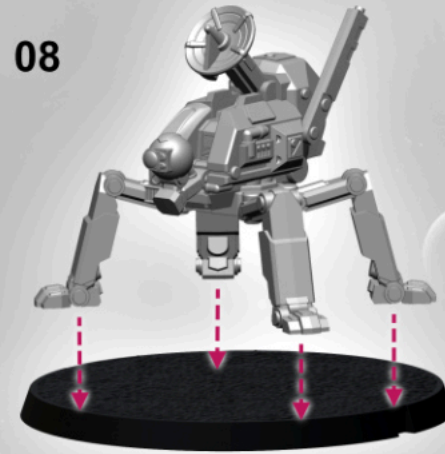

TECH DRONE


01

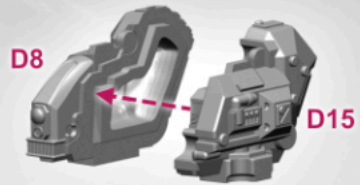


04



07

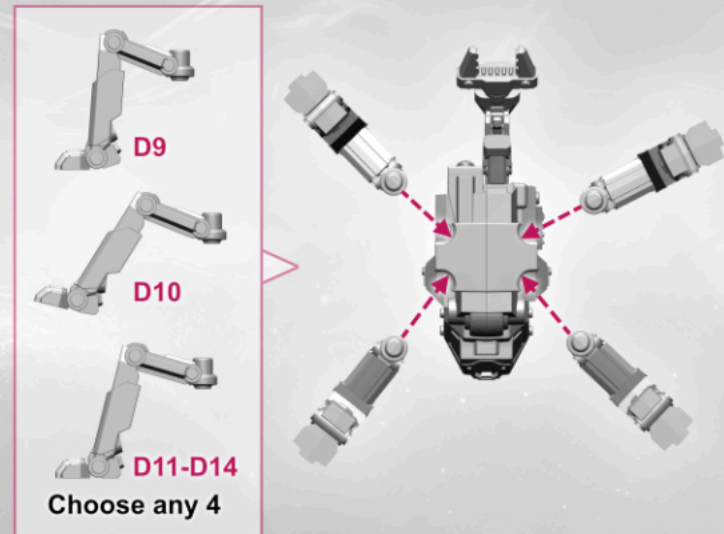


02

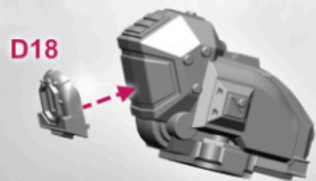


05




03

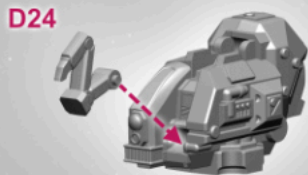

06

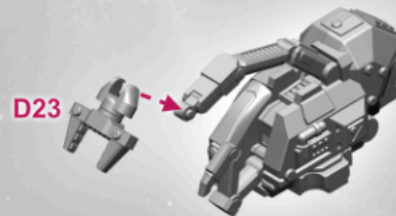


08

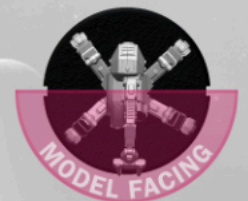

MEDIC DRONE


01

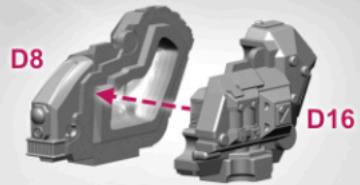


04




07

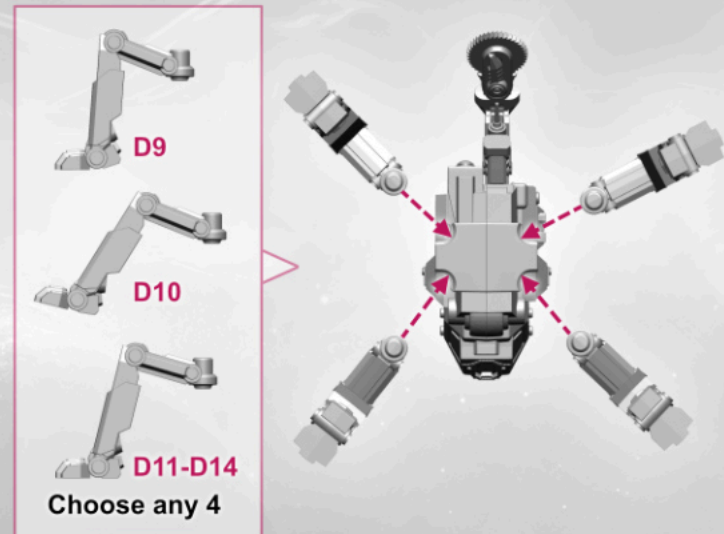


02

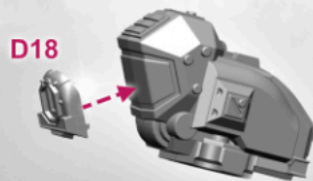


05

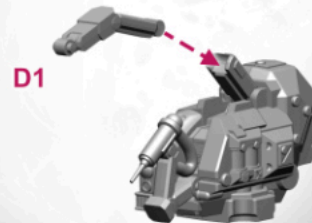

03

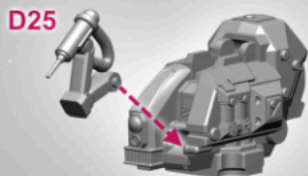

06

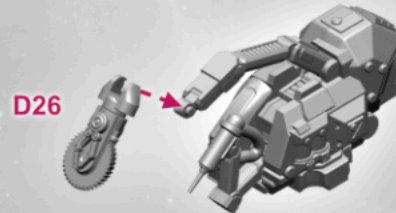

08

