


EPIRIAN CONTRACTORS

Preparation: We recommend using sharp clippers to remove parts from the frame. Pulling parts from the sprue without clipping may result in damage to delicate parts. Use a hobby knife, seam scraper or file to remove any mould lines or frame joint nubs left by the clippers.

Assembly: For best results, use plastic glue (polystyrene cement).

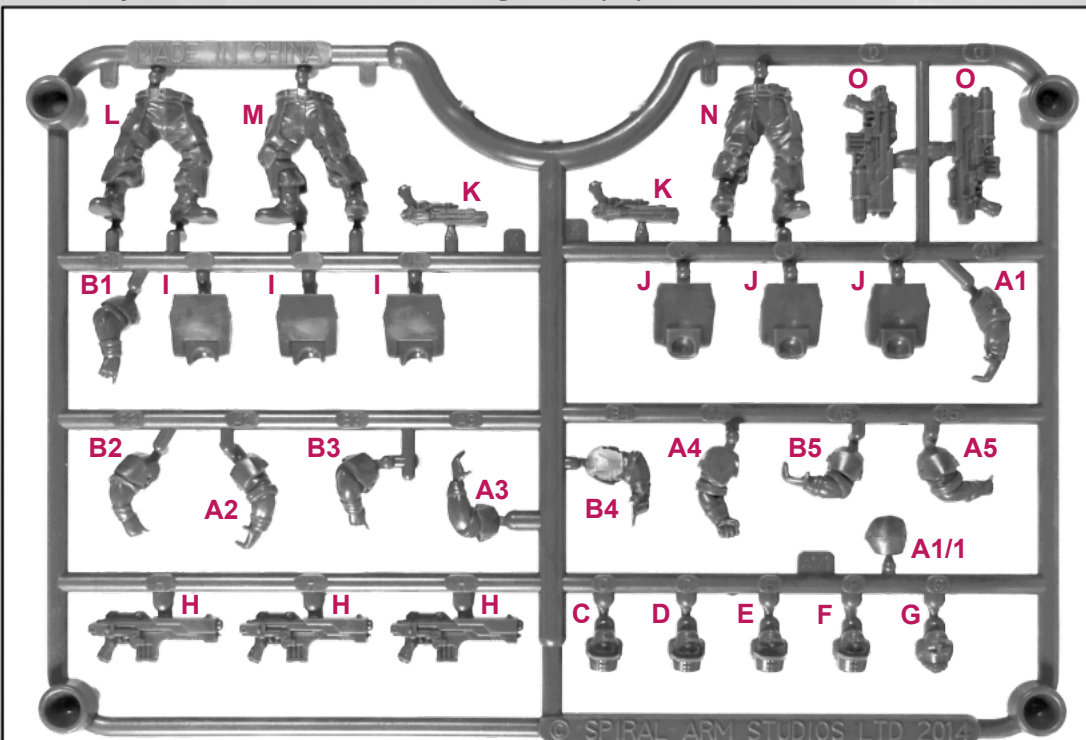


PARTS LIST


A1	Left arm 1	B4	Right arm 4
A1/1	Left arm 1 shoulder pad	B5	Right arm 5
A2	Left arm 2	C-G	Head (x5)
A3	Left arm 3	H	Maglock assault rifle (x3)
A4	Left arm 4	I	Torso front (x3)
A5	Left arm 5	J	Torso back (x3)
B1	Right arm 1	K	Maglock pistol (x2)
B2	Right arm 2	L-N	Legs (x3)
B3	Right arm 3	O	Maglock rifle with aux.grenade launcher
Base	MEBS01 - 25mm Round Base		





01

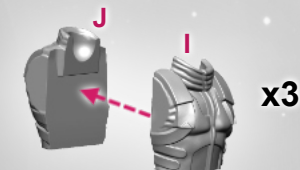

02

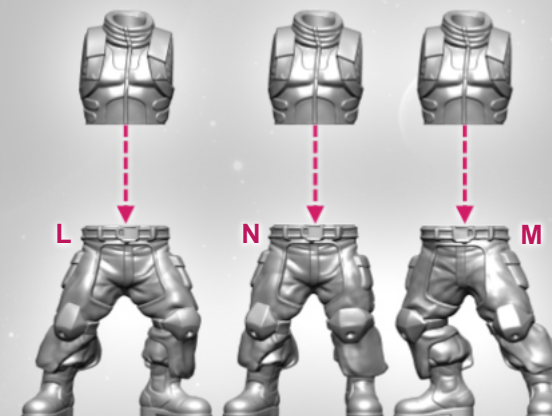


03

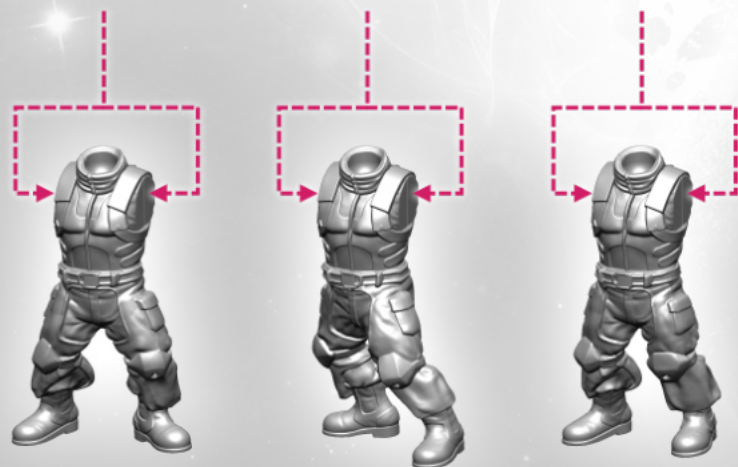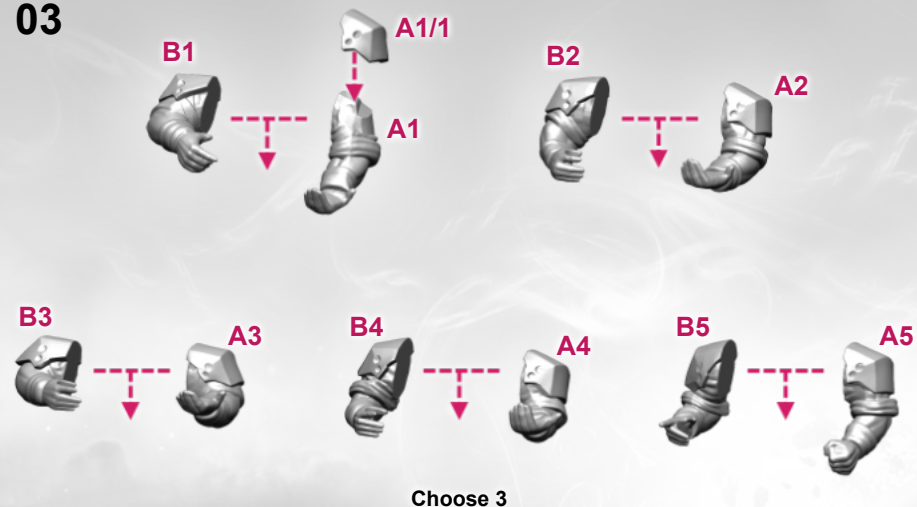

Rifle arms work best in their numbered pairs. We recommend dry-fitting with the weapon to get the positioning right before applying glue.

All of the right hands are compatible with any of the weapons.

04

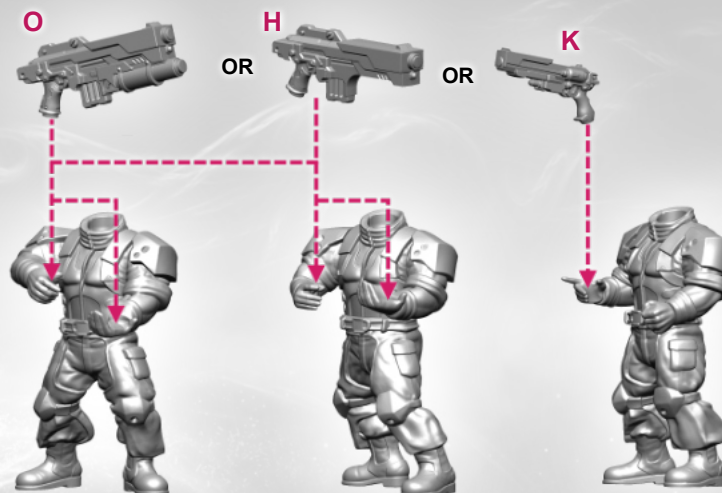

05

