


REMNANT NIMBUS PATHFINDER

Preparation: We recommend using sharp clippers to remove parts from the frame. Pulling parts from the sprue without clipping may result in damage to delicate parts. Use a hobby knife, seam scraper or file to remove any mould lines or frame joint nubs left by the clippers.


Assembly: For best results, use plastic glue (polystyrene cement).

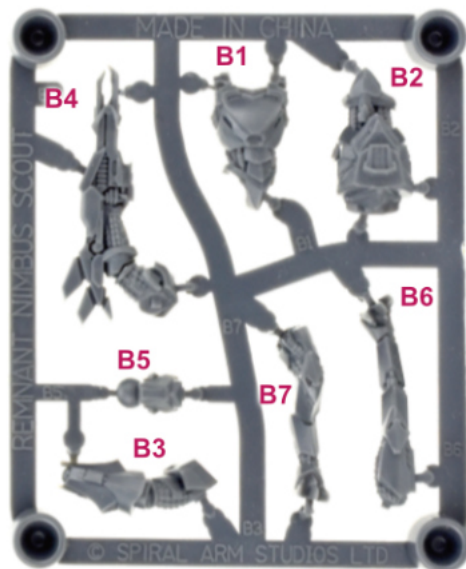


PARTS LIST

B1	Torso Front	<i>From Militus Sprue (optional)</i>	
B2	Torso Rear	01-12	<i>Militus Heads</i>
B3	Pinpoint Scanner Arm	13	<i>Aerial (for head 07)</i>
B4	Arc Splitter Arm	15	<i>Boostpack</i>
B5	Head	L18	<i>Left Jet Front</i>
B6	Right Leg	L19	<i>Left Jet Nozzle</i>
B7	Left Leg	L15	<i>Right Jet Front</i>
		R16	<i>Right Jet Nozzle</i>
Base	MEBS04 - 36mm Round Base		

01

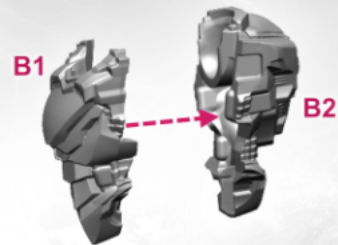

02

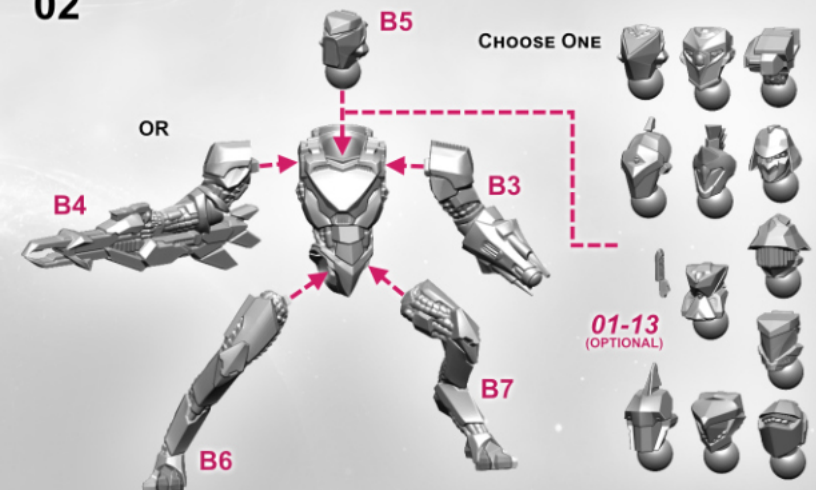

03

