


BIOLOGIS

Preparation: We recommend using sharp clippers to remove parts from the frame. Pulling parts from the sprue without clipping may result in damage to delicate parts. Use a hobby knife, seam scraper or file to remove any mould lines or frame joint nubs left by the clippers.

Assembly: For best results, use plastic glue (polystyrene cement).

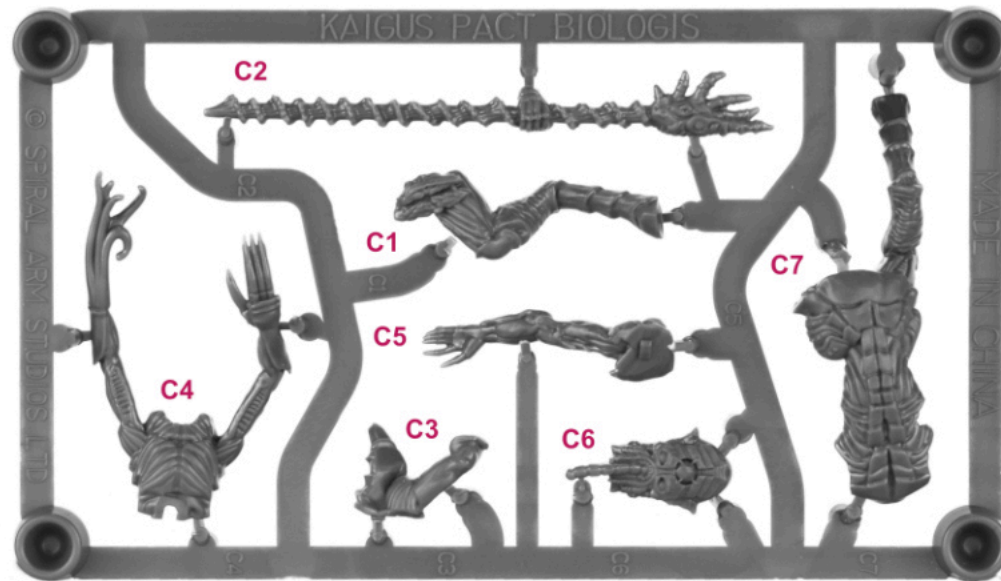


PARTS LIST

C1	Right Leg
C2	Genostaff - Restoration
C3	Right Arm
C4	Torso Front
C5	Left Arm
C6	Head
C7	Body
Base	MEBS04 - 36mm Round Base
Alternate Genostaff parts on Practat Sprue	
B7	Genostaff - Dissolution
B8	Genostaff - Preservation



01

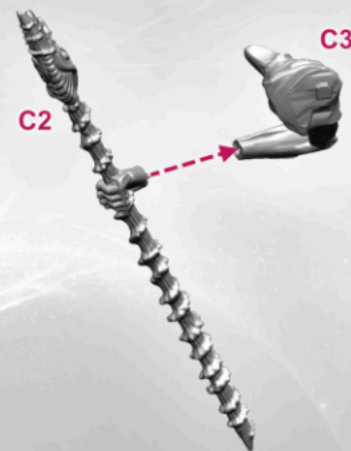

02



03

