


KAIGUS PACT THRALLS


Preparation: We recommend using sharp clippers to remove parts from the frame. Pulling parts from the sprue without clipping may result in damage to delicate parts. Use a hobby knife, seam scraper or file to remove any mould lines or frame joint nubs left by the clippers.

Assembly: For best results, use plastic glue (polystyrene cement).

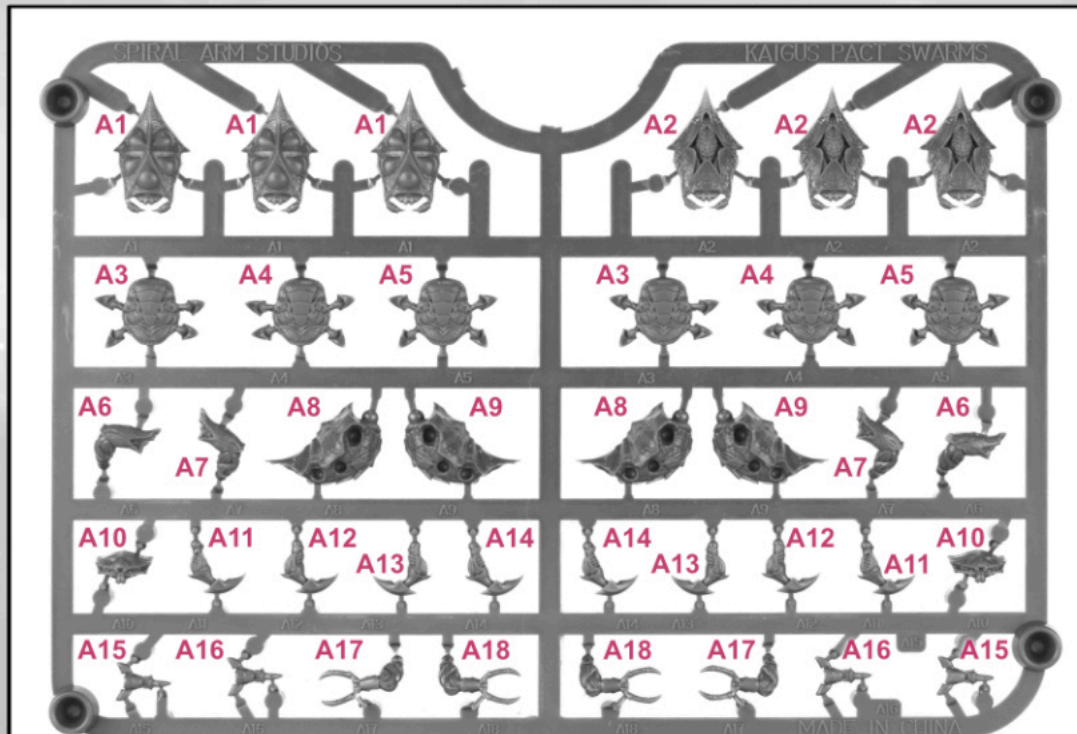

PARTS LIST

A1	Shatter Thrall Back (x3)	A11	Tamakin Right Leg 1 (x2)
A2	Vapor Thrall Back (x3)	A12	Tamakin Left Leg 1 (x2)
A3	Krii Legs 1 (x2)	A13	Tamakin Right Leg 2 (x2)
A4	Krii Legs 2 (x2)	A14	Tamakin Left Leg 2 (x2)
A5	Krii Legs 3 (x2)	A15	Ripper Claw Thumb Left (x2)
A6	Dart Pod Right Arm (x2)	A16	Ripper Claw Thumb Right (x2)
A7	Dart Pod Left Arm (x2)	A17	Ripper Claw Left (x2)
A8	Tamakin Body Right (x2)	A18	Ripper Claw Right (x2)
A9	Tamakin Body Left (x2)	Base	MEBS06 - 46mm Round Base (Krii)
A10	Tamakin Head (x2)	Base	MEBS03 - 32mm Round Base (Tamakin)

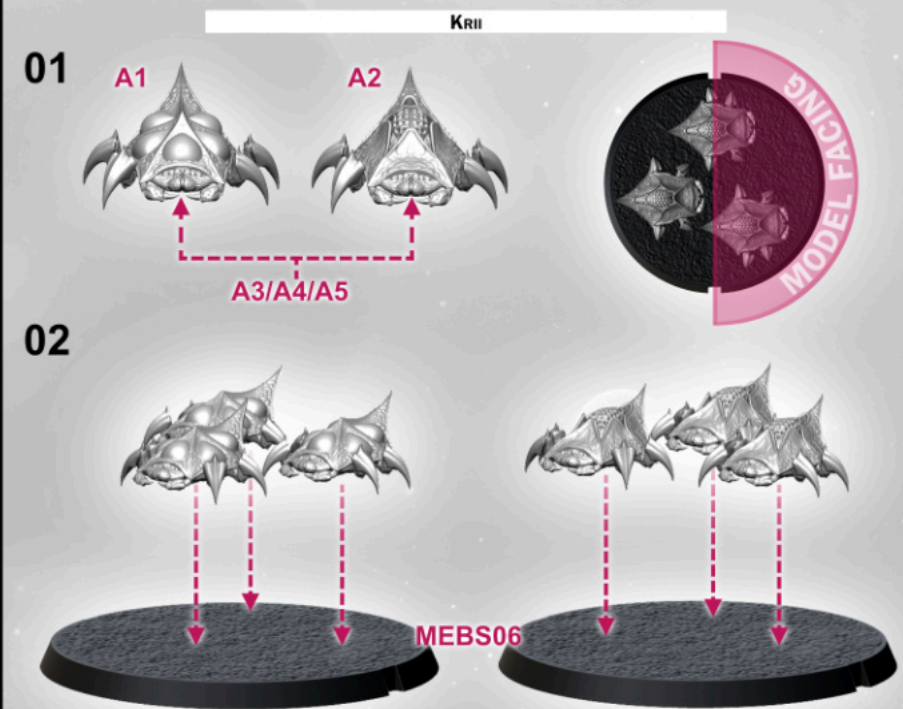

KAIGUS PACT THRALLS

Preparation: We recommend using sharp clippers to remove parts from the frame. Pulling parts from the sprue without clipping may result in damage to delicate parts. Use a hobby knife, seam scraper or file to remove any mould lines or frame joint nubs left by the clippers.

Assembly: For best results, use plastic glue (polystyrene cement).

TAMAKIN


01



02



03

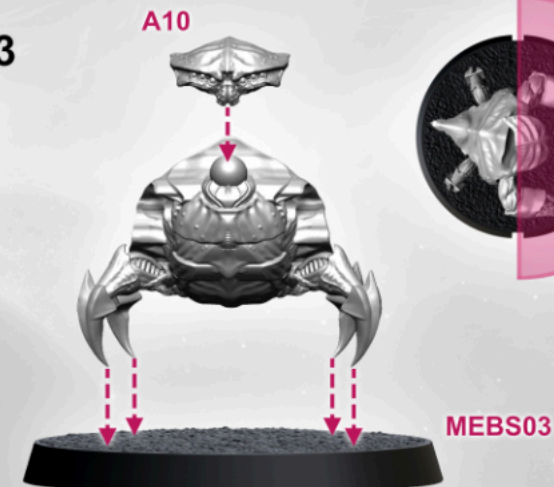

04



Claws: If you are gluing your models directly to their bases, polystyrene cement should hold them securely when applied to the claw tips. If you are gluing to other basing material, having trouble getting the glue to hold, or want it to look like the claws are sunk into the ground, you can snip the tips off some or all of the claws to provide a better bonding area.

